

## PULLEYE Instructions


How to install a pulling eye on a multi fiber cable when using Complex PULLEYE-1 or PULLEYE-2

**Tools Required:** Electrician Tape (Not Included with PULLEYE-1 or PULLEYE-2)


**Step 1:** Tape down the central strength legs behind the fanout point.




**Step 2:** Cross the legs to form a weave pattern. The length of the weaving depends on the primary cable diameter. Tie it off and trim the excess.

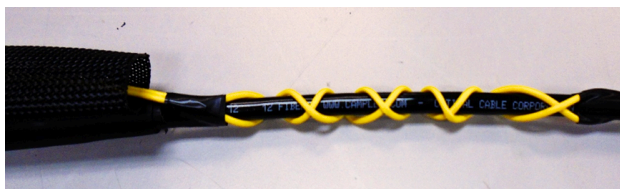

**Step 3:** Using electrician tape, wrap the legs firmly.

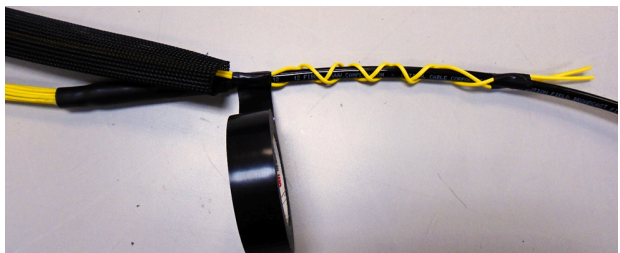

**Step 4:** Pull back the Techflex to insert the connectors.

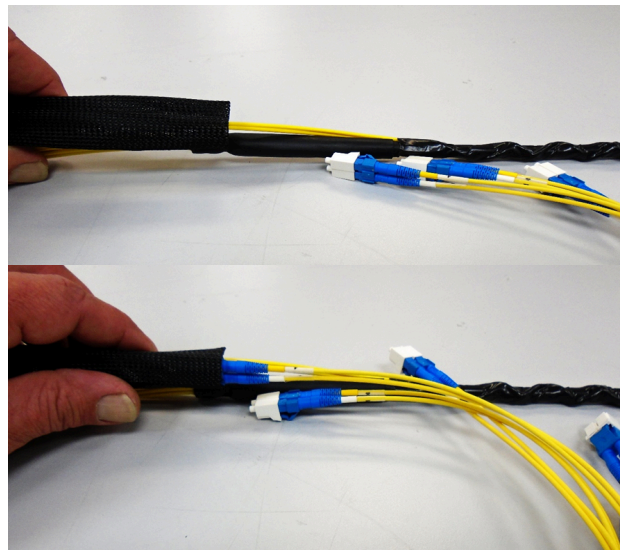

**Step 5:** Bring the Techflex over the legs and wrap with electrician tape.



**Step 6:** On final inspection, the tension should occur at the core legs.

